



All clock settings are made with 2 buttons located on the back.



MENU button (to navigate between the different screens)
OPTION button (To select the desired menu option)
*The colors of these buttons may vary in color depending on the model.



Turn on the clock and place it in an open area to synchronize the time.
Time will be correct when panel Stops flashing.




Set the time zone. EV – El (Spain Summer or Winter time)
PV – Pl (Portugal Summer or Winter time)
More Options for other countries.




Indicate the time interval for departure.
Off, 60 sec, 30 sec, 15 sec, 12 sec. Etc etc..



Indicate the mode of use of the watch.
CA countdown interval HO Current time.

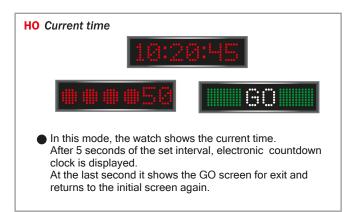

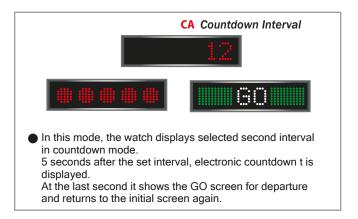



 To adjust the screen brightness press the OPTION button from the brightness adjustment screen.



 Battery charge screen tells you the current charge percentage of the watch. This screen does not allow any type of adjustment.