


STS UNIT CONSOLE + POWER CORD

Connectivity scheme

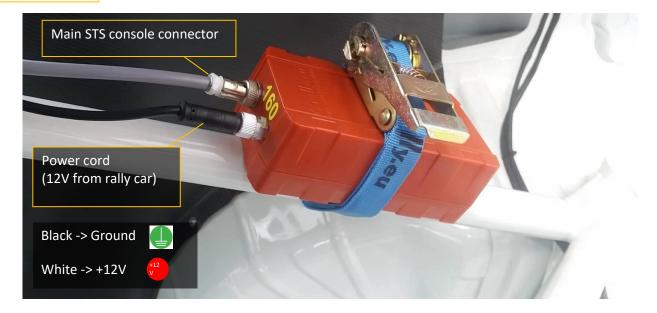









Installation scheme

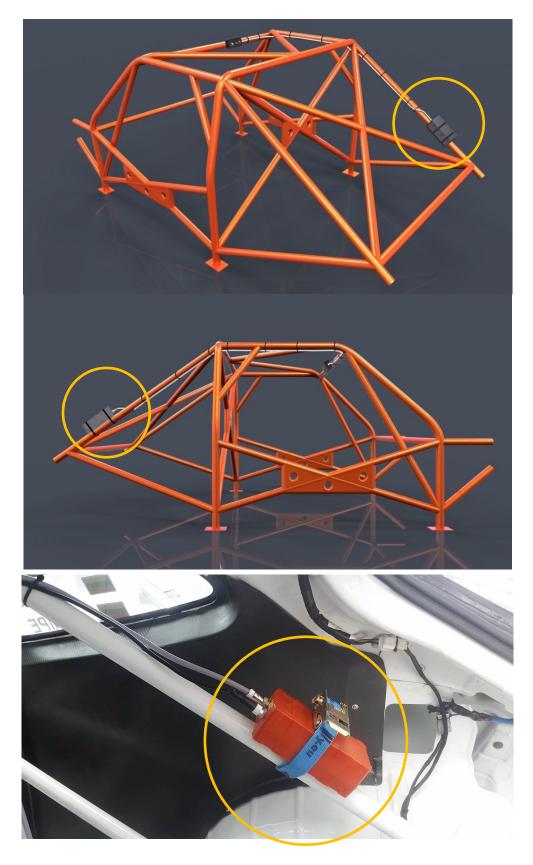



POWER CORD CONNECTION

(PLEASE CONNECT STS TO POWER ONLY IN RALLY CAR, DURING RECCE STS USE INTERNAL BATTERY)

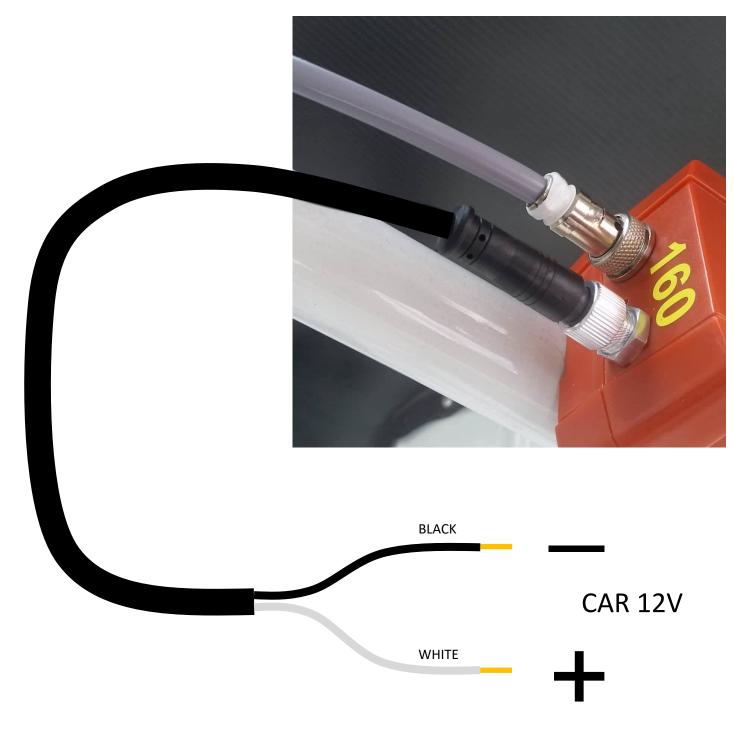



SPECIAL IFORMATION STICKER PLACE:



+XXX XXX XXX



