



PASSWORD PRL FPAK

861426

Press the WHITE button to enter the menu. Press MANAGE in Roadbook and choose PRL. Click on ALL DATA (red) Enter the password Click on the green tick, 1 time and press ← to go back of the menu 2 times.

