

DRIVER ID

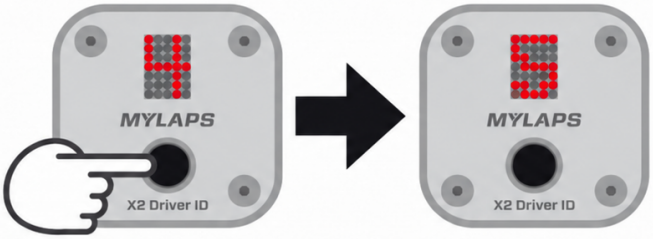

X2 Driver ID can be used by up to 6 users per transponder. Press the button to change driver.

Don't forget to switch during the drivers change!

Driver 1 = ID1
Driver 2 = ID2
Driver 3 = ID3
Driver 4 = ID4
Driver 5 = ID5
Driver 6 = ID6

IMPORTANT:
The system can be used by up to 6 drivers!

ID5 is used
No higher IDs required